

normen 40

RC5-kodes kaart 1

Overige kommando's:

adres 0,1 (TV 1,2)	57 external 2	adres 2 (TXT)	adres 3 (TV 1,2 extend.)
nr. betekenis	59 advance	nr. betekenis	nr. betekenis
10 1/2/3 digits 10	60 TXT sub-mode/12	10 step page +	10 video personal pref.
11 freq./prog./ch./11	61 sys. standby	11 step page -	11 audio personal pref.
12 standby	62 crispener	28 enter	28 pay tv ch. +
13 mute/de-mute	70 speech/music	29 memory out	29 pay tv ch. -
14 personal pref.	79 sound scroll	30 seq. out	30 radio ch. +
15 display	104 PIP size	32 exchange (antiopie)	31 radio ch. -
28 contrast +	105 pic. scroll	33 index	32 tilt fwd.
29 contrast -	106 act. on/off	34 row zero (antiopie)	33 tilt back
30 search +	107 red	38 print	56 external 3
31 tint/hue -	108 green	39 antiopie/TV	57 external 4
32 ch./prog. +	109 yellow	41 page hold	62 wide screen
33 ch./prog. -	110 cyan	42 time/timed page	67 program 10
34 Altern./ch.	111 index/white	43 large top/bot./normal	68 program 11
35 1/2 language	112 next	44 reveal/conceal	69 program 12
36 spatial stereo	113 previous	45 cancel picture	72 video personal pref.
37 stereo/mono	122 store open/close	46 TV/text/sub.	73 audio personal pref.
38 sleep timer	126 movie expand	49 erase/correct	104 tilt forward
39 tint/hue +	127 parental access	62 newflash	105 tilt backwards
40 RF switch			120 external 3
41 store/execute/vote			121 external 4
42 time			122 chan. setting menu
43 scan fwd./incrm.			126 wide sreen
44 decrement			
46 sec. con/menu			
47 show clock			
48 pause			
49 erase/correct			
50 rewind			
51 go to			
52 wind			
53 play			
54 stop			
55 record			
56 external 1			

normen 41

RC5-kodes kaart 2

adres 9 (VCR 1,2 extend.)	adres 12 (CD-VIDEO)	107 FTS 2	adres 14 (CD-PHOTO)
nr. betekenis	nr. betekenis	108 FTS 1	nr. betekenis
28 date +	10 pict. no./time	109 title	28 repeat once
29 date -	11 recall	110 AMS +	29 tsp cont.
30 start time +	12 standby	111 AMS -	30 search +
31 start time -	13 mute/de-mute	112 index next	31 search -
32 record prog. +	15 display	113 index previous	32 next
33 record prog. -	28 TSP once	114 next disc	33 previous
34 alternate ch.	29 TSP cont.	115 previous disc	36 program mode
35 stop time +	30 next	116 +10 (1/2 digits)	41 program mode/keep
36 stop time -	31 program mode	126 movie expand	42 time edit
40 frame fwd.	33 memory		43 scan fwd.
41 frame rev.	34 slow run rev.		47 play rev./direction
42 scan -9	35 sound select		48 pause
43 scan -7	36 previous		49 erase/correct
44 scan -5	37 still rev.		53 play
45 scan +5	38 speed +		54 stop
46 scan +7	39 speed -		58 skip
47 scan +9	40 slow run fwd.		59 repeat a/b program
56 external 1	41 still fwd.		65 turn counter-clockwise
57 external 2	42 multi screen		66 turn clockwise
106 scan -11	43 strobe		104 PIP size
107 scan -7	44 scan rev.		108 FTS 1
108 scan -5	45 open/close		114 disc left
109 scan +5	46 scan fwd.		115 disc right
110 scan +7	47 video clip		117 review store
111 scan +11	48 pause		120 auto play
	49 erase/correct		121 insert
	53 play		122 interval
	54 stop		125 full view
	58 clear memory all		126 tele
	59 repeat a/b program		127 normal
	60 TXT mode/RF switch		
	62 CX 1,2,3		
	67 audio int./ext.		
	68 video int./ext		
	72 fade in		
	73 fade out		
	104 PIP size/edit		